


31456

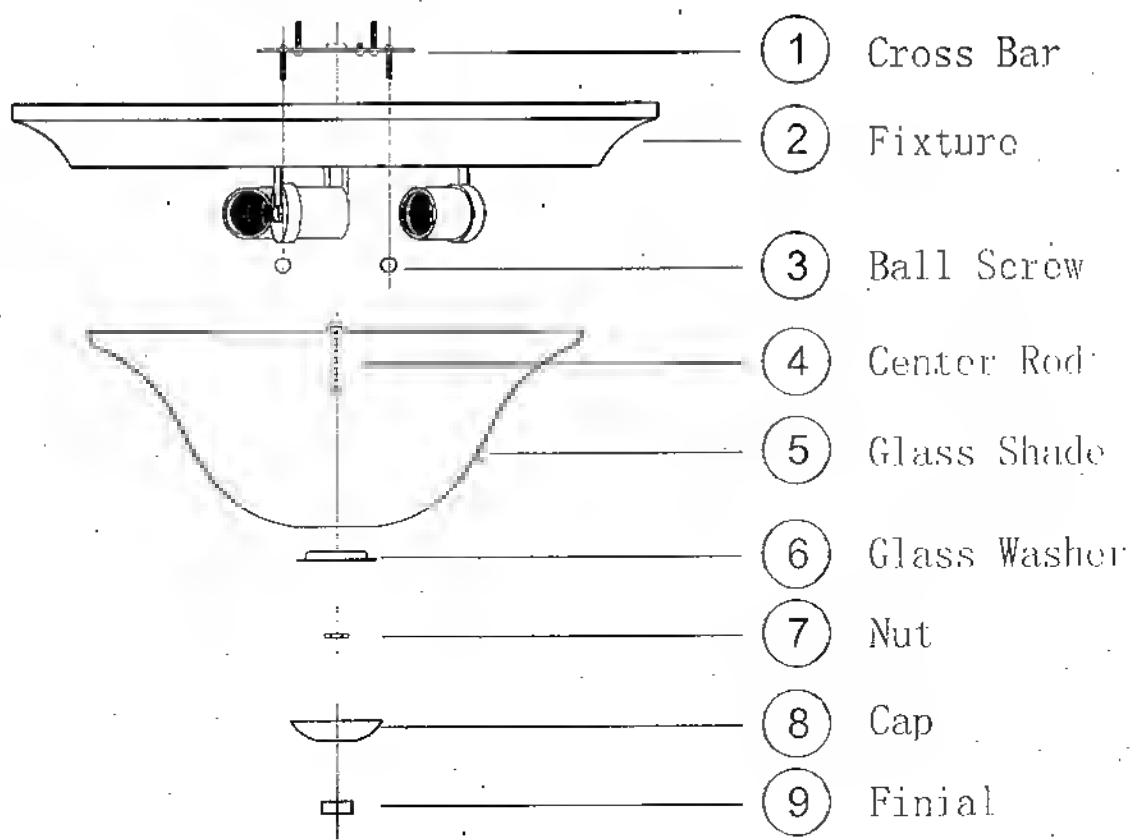

Assembly Instruction For 31456:

1. Secure the Cross Bar(1) to the ceiling junction box.
2. Connect the supply & fixture wires at the ceiling junction box.
3. Secure the Fixture(2) to the Cross Bar(1) with two Ball Screws(3).
4. Install the Center Rod(4) to the center nut of the Fixture(2).
5. Install the correct bulbs(not provided).
6. Secure the Glass Shade(5) to the Fixture(2) with the Glass Washer(6) and the Nut(7).
7. Attach the Cap(8) to the Glass Shade(5) using the Finial(9).